

P.O. Box 247, 4320 Aerotech Center Way Paso Robles, CA 93447 Telephone: (800) 350-2223 Fax: (805) 238-4201 PAGE 1 OF 2 Page Rev. Date: 03-13-17 P/N: 716044-A

NP205 T/C LONG GM 32

| KIT CONSISTS OF: | | | | | When replacing a NP205 male in- |
|------------------|------------|------------------|------------------------------------------------------|--------|--------------------------------------|
| <u>No.</u> | Qty | Part No. | Description | | put 10, 27, or 23 spline, the NP205 |
| 1 | 1 | 340407 | INPUT GEAR SNAP RING | | case will require machining for |
| 2 | 1 | 52-9600 | GEAR- NP205 INPUT 46T | | the larger input bearing bore. |
| 3 | 1 | 52-9603 | SHAFT- NP205 INPUT 32T | Photos | shown are of a Ford T/C. The instal- |
| 4 5. | 1 | 716467 716315 | SNAP RING-EXTERNAL 1 15/16 T/C INPUT GEAR BEARING | | n the new gear is the same on all |
| | ts are ass | sembled at Adva | | | of T/C's |
| J. A.C. Co | | | | models | or 1/C s |
| | | | | | |

Remove the tailhousing bolts and front retainer bolts (if your transfer case has a front retainer). Shift the transfer case into 2WD high range and remove the tailhousing from the transfer case. Once the T/C output is removed, shift the T/C into low range which will release the slider. Remove the snap ring from the shaft to the bearing so the shaft and the bearing can be separated. This will allow the gear to drop downward and clear the shift fork.

Once the old gear and bearing are removed, clean the bore of the case and get ready to reassembly the new gear assembly.

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.



P.O. Box 247, 4320 Aerotech Center Way Paso Robles, CA 93447 Telephone: (800) 350-2223 Fax: (805) 238-4201 PAGE 2 OF 2 Page Rev. Date: 03-13-17 **P/N: 716044-A**

NP205 T/C LONG GM 32



The new gear comes assembled with the outer bearing snap ring pulled off the bearing. From the back side of the transfer case install the gear and bearing into the case. The gear gets assembled at an angle to clear the shift fork. Slide the bearing and gear up to meet the case bore. The bearing should slide into the case bore enough to align everything, you can tap the back of the gear with a rubber mallet to get the bearing fully installed. Note the bearing should come out the front of the case and expose the snap ring grove.



The slider ring of the NP205 will need to be installed back onto the shift fork in low range and then the transfer case needs to be shifted into high range. During this procedure be careful of your fingers as you need to line the slider with the gear drive teeth. Once the gear and slider are supported together you will need to install the front bearing snap ring. This will retain the gear in the proper location in the case. The snap ring can be started in the bearing grove with your thumb and then just working it into place with your other hand until it spirals into place. With the rubber mallet tap the front of the gear assembly to set the bearing and snap ring against the case.

<u>SPECIAL NOTE:</u> The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.