

ADVANCE ADAPTERS INC.

P.O. Box 247, 4320 Aerotech Center Way

Paso Robles, CA 93447

Telephone: (800) 350-2223 Fax: (805) 238-4201

P/N: 713089

New Item: (2/99)

PAGE 1 OF 3

Page Rev. Date: 03/7/09

CHEVY V8 BOLT-IN MOUNT 1976-86 CJ's also V6's WITH AUTO TRANS.

KIT CONSISTS OF:

No.	Qty	Part No.	Description
1.	2	4980	STOCK GM MOUNTS
2.	1	713089-L	LEFT MOUNT
3.	1	713089-R	RIGHT MOUNT
4.	1	713089S	RUBBER BUMP STOP
5.	10	723701	3/8"-16 NUT PLATED
6.	10	723704	LOCK WASHER, 3/8" PLATED
7.	8	723733	H.H.C.S. 3/8"-16 X 2-1/2" PLT (GR 5)
8.	2	723738	H.H.C.S. 3/8"-16 X 2-3/4"
9.	2	724301	NYLON LOCKNUT, 7/16"-14 PLT.
10.	2	724302	FLAT WASHER 7/16" PLT.
11.	2	724311	H.H.C.S. 7/16"-14 X 3-1/2" (GR 5)
12.	1	JP001	JEEP INSTRUCTION MANUAL

SPECIAL NOTE:

If using this mount with our clutch bracket P/N 716638, the clutch linkage bracket will require some modifications.

The GM rubber mount supplied in this kit may be a loose fit over the tubing on our mount. If so the bolt installed and tightened through the mount will squeeze the two tabs on the GM mount closer together for a proper fit to the Advance Adapters mount. These GM mounts supplied sometimes vary in widths from the manufacture.

INSTALLATION PROCEDURES:

This mount kit is designed as a bolt in application. Some cutting is required.



1. Unbolt and remove the stock frame mounts from the vehicle. The passenger side stock bump stop must be cut off and the frame rail must be ground flat.

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.

ADVANCE ADAPTERS INC.

P.O. Box 247, 4320 Aerotech Center Way

Paso Robles, CA 93447

Telephone: (800) 350-2223 Fax: (805) 238-4201

P/N: 713089

New Item: (2/99)

PAGE 2 OF 3

Page Rev. Date: 12-12-00


CHEVY V8 BOLT-IN MOUNT 1976-86 CJ's also V6's WITH AUTO TRANS.




2. Frame rail ground flat.



3. Driverside frame with stock mount removed.

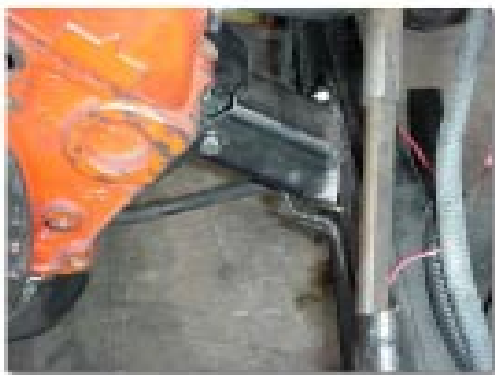

4. The new mounts use the hole of the stock frame mounts, plus the front shock tower bolt hole. A new bump stop has been added as part of the mount.

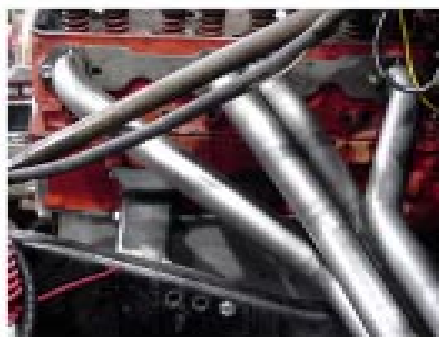

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.

ADVANCE ADAPTERS INC.

P.O. Box 247, 4320 Aerotech Center Way

Paso Robles, CA 93447

Telephone: (800) 350-2223 Fax: (805) 238-4201

P/N: 713089

New Item: (2/99)

PAGE 3 OF 3

Page Rev. Date: 12-12-00

CHEVY V8 BOLT-IN MOUNT 1976-86 CJ's also V6's WITH AUTO TRANS.



717038 Headers (driver's side)



717038 Headers (passenger side)



Steering clearances on
717038 headers



Motor offset to the driver's side

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.