


TOYOTA LAND CRUISER 4 SPEED TO CHEVY V8 - MARK'S 4WD ADAPTORS

KIT CONSISTS OF:

No.	Qty	Part No.	Description
1.	1	712525	MARK'S BELLHOUSING ADAPTOR
	712525 Kit includes:		
	1	1	712525-B T/O BUSHING FOR 712525
	2	1	716314 T/O BRG. LOW-DIAPH CLUTCH
2.	1	713038	BELLHOUSING MOUNT (<i>Passenger Mount</i>)
3.	3	713039	BELLHOUSING MOUNT SPACERS (<i>Driver's Side</i>)
4.	1 Kit	713124	CHEVY V8 MOTOR MOUNTS
5.	3	725002	1/2" LOCK WASHERS
6.	3	720043	BELLHOUSING MOUNT BOLTS 12mm X 1.75 TH X 70mm
7.	1	TLC001	LAND CRUISER INSTRUCTION MANUAL


MOUNTING HARDWARE FOR SLAVE CYLINDER

8.	2	716039	SPACERS USE FOR SLAVE CYLINDER
9.	2	720015	10mm FLAT WASHERS
10.	2	723704	3/8" LOCK WASHERS
11.	2	723738	3/8"-16 x 2-3/4" H.H.C.S.

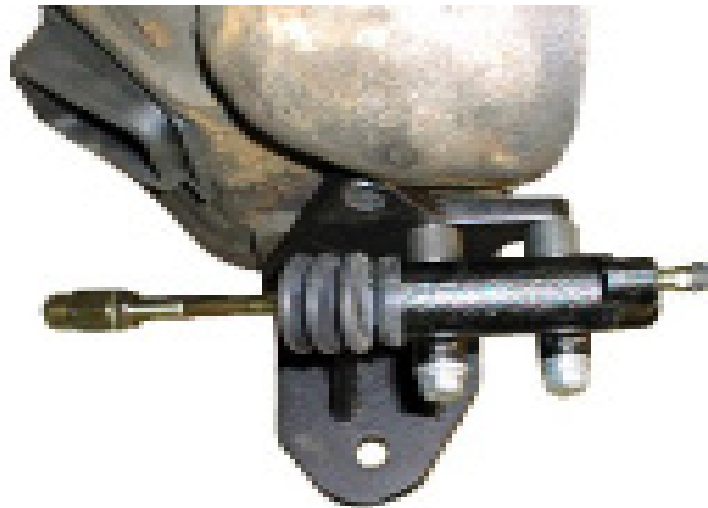

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.

TOYOTA LAND CRUISER 4 SPEED TO CHEVY V8 - MARK'S 4WD ADAPTOR

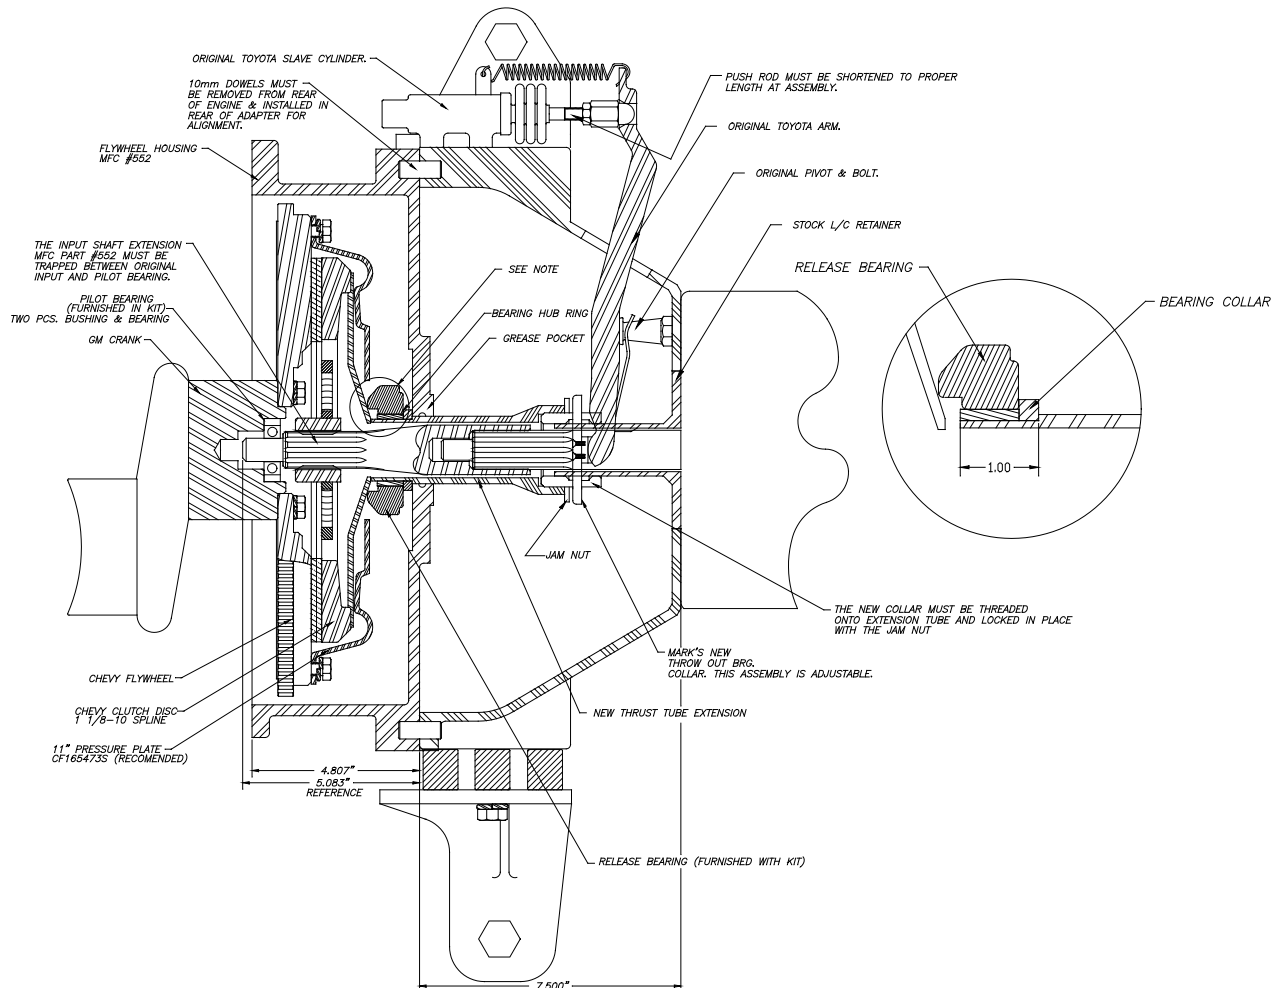

NOTE:

1. Thrust tube must be installed prior to release bearing and ring assembly.
2. Make sure that bearing support ring is installed first and then release bearing collar.
3. If assembled before, you will find that the assembly will not fit through flywheel housing bore.
4. This kit fits with both the stock Toyota cast iron and stamped steel release arms.
5. The new release collar is designed to fit both release arms. When using the cast iron arm, new clips have been provided to connect the arm to the collar. The small square metal blocks need to be installed on the new collar and Loctite into position.

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.