ADVANCE ADAPTERS INC.

P.O. Box 247, 4320 Aerotech Center Way Paso Robles, CA 93447 Telephone: (800) 350-2223 Fax: (805) 238-4201

P/N: 300621


PAGE 1 OF 1 Page Rev. Date: 09-06-24

SPEEDOMETER HOLE PLUG KIT

KIT CONSISTS OF:

| No. | Qty | Part No. | Description |
|-----|-----|----------|--------------------------------|
| 1. | 1 | 300104P | SPEEDOMETER HOLE PLUG |
| 2. | 1 | 300104F | WASHER |
| 3. | 1 | 300630 | O-RING |
| 4. | 1 | 301403 | BOLT- 5/16"-18 x 3/4" H.F.C.S. |

This kit is to plug the speedometer hole on the Atlas tailhousing. The hole plug uses an O-ring to seal and then the washer and bolt to retain the plug in place. The plug and O-ring should be installed fully into the tailhousing and then retained with the washer and bolt. Using the bolt and washer to push the plug into the tailhousing will force the plug to cock in the housing.

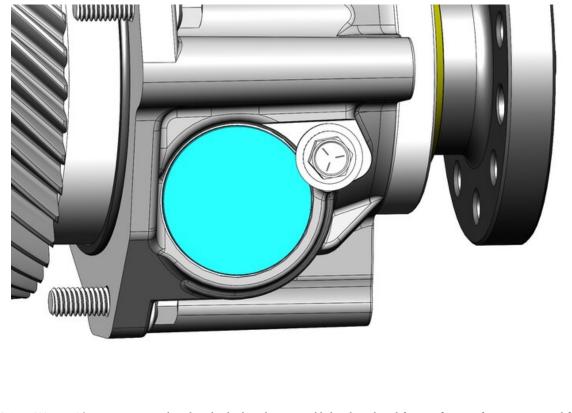

<u>SPECIAL NOTE:</u> The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.