


ATLAS PAN ASSEMBLY

KIT CONSISTS OF:

| No. | Qty | Part No. | Description |
|-----|-----|----------|--------------------------|
| 1. | 1 | 301106 | PAN- ATLAS ACCESS |
| 2. | 1 | 300919 | DRAIN PLUG SEAL WASHER |
| 3. | 1 | 300920 | DRAIN PLUG MAGNETIC |
| 4. | 1 | 301400 | ATLAS PAN GASGET |
| 5. | 14 | 301401 | 5/16-18 X 1" FHHCS BOLTS |

NOTES:

Atlas pan assembly, The pan bolts should be torqued to 20 ft, lbs. and RTV silicone should be used on the threads of the bolts.

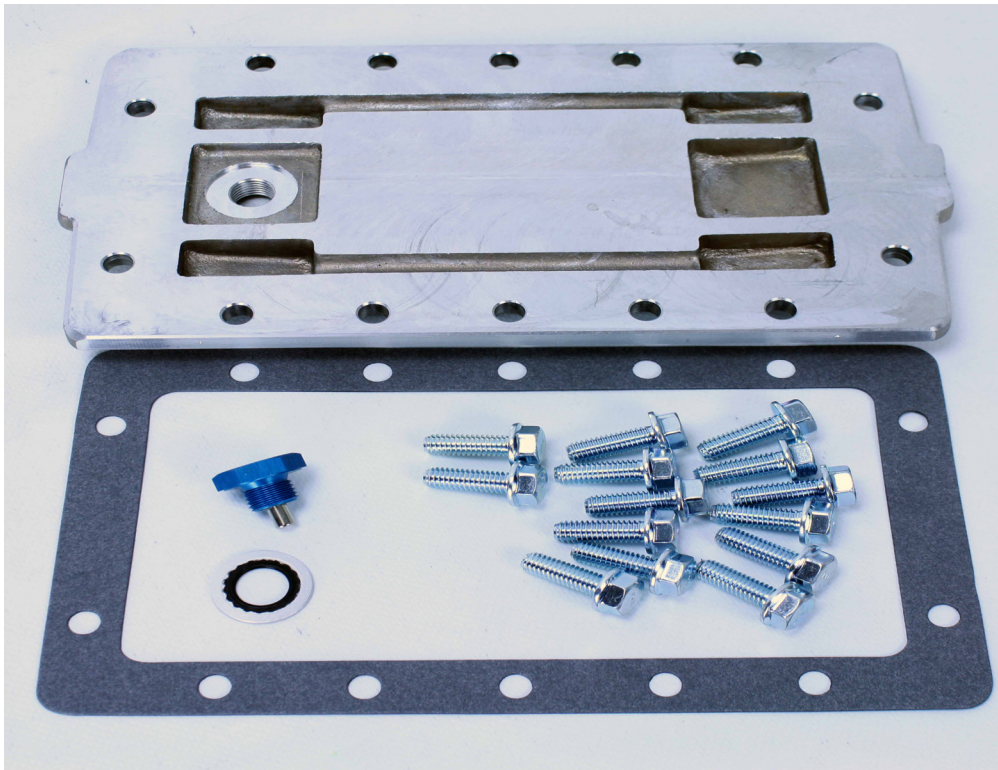

SPECIAL NOTE:

The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.