

P.O. Box 247, 4320 Aerotech Center Way

Telephone: (800) 350-2223 Fax: (805) 238-4201 PAGE 1 OF 2 Page Rev. Date: 04-19-19

P/N: 712546

TE 4.6/5.0/5.4 BELLHOUSIN IYDRAULIC SLAVE CYLIN

KII CONSISTS OF:			
No.	Qty	Part No.	<u>Description</u>
1.	1	712546A	BELLHOUSING- COYOTE 4.6/5.0/5.4 MODULAR MODIFIED
2.	1	712546B	BRACKET- SLAVE CYL
3.	1	712546C	CLUTCH RELEASE ARM
4.	1	712546D	STARTER INDEX PLATE
5.	1	712546E	PIVOT BALL CLUTCH RELEASE ARM
6.	1	712546F	FITTING -4 JIC TO 1/8" NPT
7.	1	716169C	BUSHING- CRANK- 5.0 COYOTE TO .750 PILOT TIP
8.	1	716329	SLAVE CYL -PULL TYPE WILLWOOD
9.	1	716329-1	PUSH ROD SPACER
10.	1	723118	H.H.C.S. 5/16 -18 X 1-3/4 LG

1/4 X 20 X 1-1/2 S.H.C.S.

5/16 -18 NYLOC HEX NUT

.8125" bore master cylinder recommended

INSTALLATION INSTRUCTIONS:

722534

723141

723156

KIT CONCICTS OF

11.

12.

13.

1

The Ford Modular engine consist of the 4.6, 5.0 & 5.4L V8's. The bellhousing adapters and transmission options for these engines are limited due to the clutch linkage. We decided to open the market up to a few different transmission options. We modify a stock Tremec bellhousing equipped for the Mustang cable clutch linkage and added a bracket to it. This modified bellhousing is now equipped with a hydraulic linkage set up.

STUD BOLT-5/16 -24 X 2 (slave cylinder bolt)

This particular bellhousing was developed for use with one of our adapter plates which would allow an AX15, NV3550 or Dodge NV4500 transmission couple up to the Ford Modular engine. This kit comes with a .750 pilot bushing that is equipped for these transmission pilot tips. (note: early AX15 transmissions had a .590" pilot tip.)

The bellhousing does have the standard Ford index diameter for the transmission front retainer of 4.848" and this would allow the T18, NP435, or T&C 4sp to be mounted to the bellhousing with the additional purchase of a pilot bushing, P/N 716173.

The Ford flywheel is a 164T, same as the early Ford blocks and we recommend the Centerforce clutch CF260000 for the pressure plate and the 281226 11" 1-1/16" -10 spl Ford or 383735 11" 1-1/8"-10 spl GM depending on what transmission you use. The release bearing is a N1714.



Bellhousing modified with new bracket



New slave cylinder mounted on bellhousing

The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components SPECIAL NOTE: will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.



P.O. Box 247, 4320 Aerotech Center Way


Paso Robles, CA 93447

Telephone: (800) 350-2223 Fax: (805) 238-4201 PAGE 2 OF 2 Page Rev. Date: 11-08-17

P/N: 712546

COYOTE 4.6/5.0/5.4 BELLHOUSING KIT W/ HYDRAULIC SLAVE CYLINDER



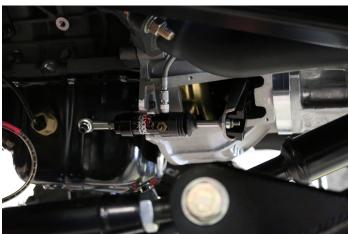





The slave cylinder comes in the box looking like the slave cylinder on top. The slave cylinder does require the heim to be switched to the other side. We also have included a new 5/16 stud bolt to be installed on the back side of the cylinder. This stud bolt should be threaded in no more than 5/8". A jam nut to hold it in place and then the heim. The bottom slave should be the final product with the heim on the back and the rounded bushing and (1) spacer connecting on the front or to the arm.

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.