

ADVANCE ADAPTERS INC.

P.O. Box 247, 4320 Aerotech Center Way

Paso Robles, CA 93447

Telephone: (800) 350-2223 Fax: (805) 238-4201

P/N: 715521

PAGE 1 OF 1

Page Rev. Date: 09-10-02

TOYOTA LAND CRUISER MECHANICAL T/C BRACKET FOR 3 & 4 SPEED TRANS. CONVS.


KIT CONSISTS OF:

| No. | Qty | Part No. | Description |
|-----|-----|------------|------------------------------|
| 1. | 1 | 715521-BLK | BRACKET |
| 2. | 2 | 723704 | 3/8" LOCK WASHER |
| 3. | 2 | 723722 | 3/8"-16 x 1-1/4" LONG H.C.S. |
| 4. | 2 | 723735 | 3/8" FLAT WASHER |

INSTALLATION INSTRUCTIONS:

The difference between the 3 and 4 speed linkage is exactly 2". The linkage gate will need to be welded or bolted to our bracket. It is best to assemble this bracket and control linkage prior to the assembly into the vehicle. You must make sure that the linkage is in the same relative location to the transfer case as it was on the original transmission. Any variation to the location could possibly cause the transfer case to jump out of gear.

If there is interference with the modulator, a smaller diameter shorter modulator is available from us, P/N 716010. In some cases, you may need to space the new bracket off the casting slightly to obtain additional clearance on the modulator.

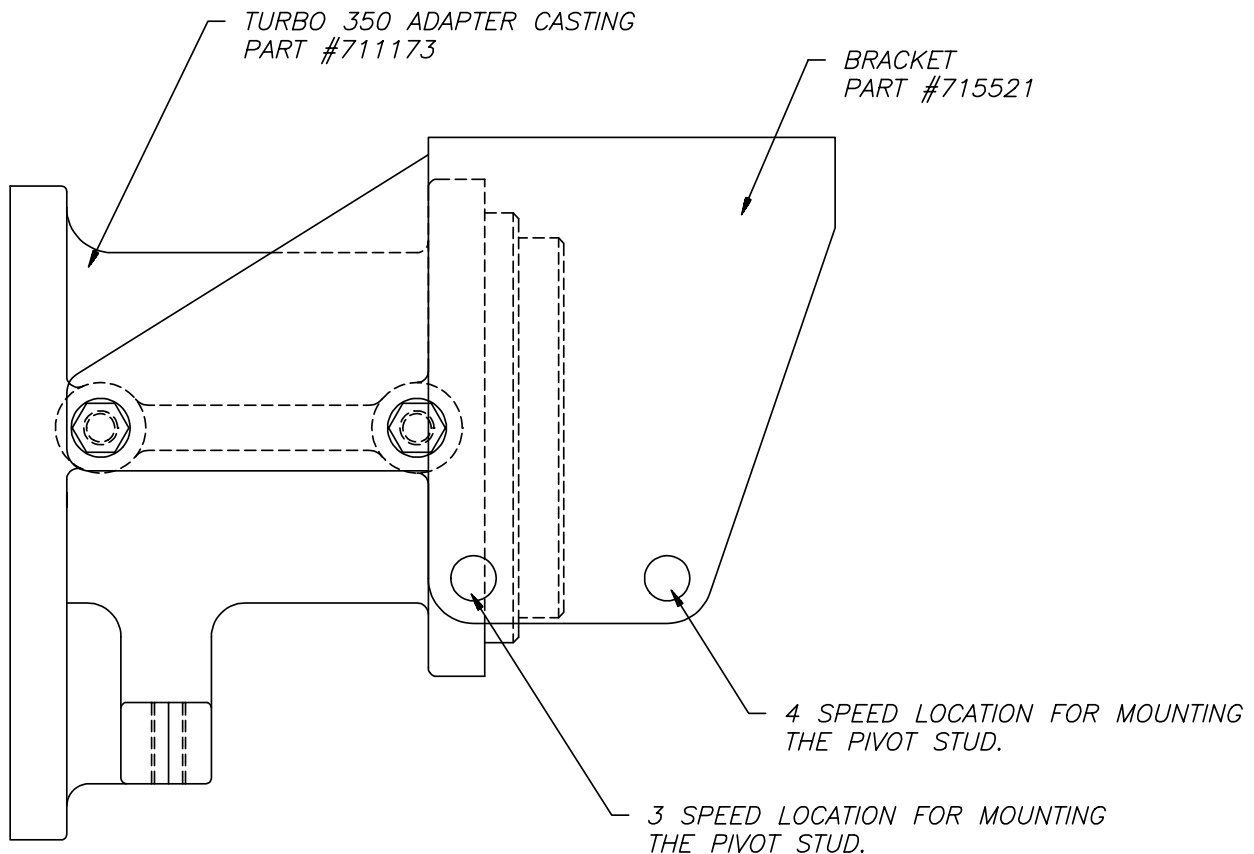

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.